General Owner's Information

Vehicle Identification Number (VIN):

Owner Name:

Address:

Phone:

Your satisfaction is our #1 goal. If you have questions or concerns about your vehicle, we suggest you follow these steps:

 Contact your Sales Representative or Service Advisor at your selling/servicing dealership.

 If the inquiry or concern remains unresolved, contact the Sales Manager or Service Manager at the dealership.

3. If the inquiry or concern cannot be resolved at the dealership level, please contact the Ford Customer Assistance Center. In the US, contact:

Ford Motor Company Customer Assistance Center 16800 Executive Plaza Drive P.O. Box 6248 Dearborn, Michigan 48126 1-800-392-3673 (FORD) TDD for the hearing impaired: 1-800-232-5952

In Canada, contact:

Customer Assistance Center Ford Motor Company of Canada, Limited P.O. Box 2000 Oakville, Ontario L6J 5E4 1-800-565-3673 (FORD)

Outside the US or Canada, contact:

Ford Motor Company Worldwide Direct Market Operations 1555 Fairlane Drive Allen Park, Michigan 48101 U.S.A. Telephone: (313) 594-4857 Fax: (313) 390-0804

Find Your Way

Table of Contents

General Owner's Information	1
Find Your Way	2
General Maintenance Information	4
Owner Checks and Services	7
Normal Schedule	9
Mileage Intervals	10
Exceptions	33
Special Operating Conditions	35
Maintenance and Service Record	37

All rights reserved. Reproduction by any means, electronic or mechanical including photocopying, recording or by any information storage and retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1999 Ford Motor Company

Find Your Way

Symbol Key

	Cars and Minivans
	Light Trucks, Sport Utilities, and Vans
	4x4 Vehicles
Diesel	Diesel
	Natural Gas Vehicles (NGV) and Propane
V	Towing a trailer or using a camper or car-top carrier
V	Extensive idling and/or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, patrol car or livery
V	Operating in dusty conditions such as unpaved or dusty roads
V	Off-road operation

Find Your Way

Why Maintain Your Vehicle?

This guide describes the scheduled maintenance required for your vehicle. Carefully following this schedule helps protect against major repair expenses resulting from neglect or inadequate maintenance and may also help to increase the value of your vehicle when you sell or trade it.

It is your responsibility to see that all scheduled maintenance is performed and that the materials used meet Ford engineering specifications. Failure to perform scheduled maintenance specific in this guide will invalidate warranty coverage on parts affected by the lack of maintenance. Be sure receipts for completed maintenance are kept with the vehicle and confirmation of the work performed is always recorded in this guide.

Your Ford or Lincoln Mercury dealer, or Ford or Lincoln Mercury Auto Care service center has factory trained technicians who can perform the required maintenance using genuine Ford parts. They are committed to meeting your service needs and to assuring your continuing satisfaction.

Protecting Your Investment

Maintenance is an investment that will pay dividends in the form of improved reliability, durability and resale value. To assure the proper performance of your vehicle and its emission control systems, it is imperative that scheduled maintenance be completed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. Parts other than Ford, Motorcraft or Ford authorized remanufactured parts that are used for maintenance replacement or for the service of components affecting emission control must be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your Warranty Guide for complete warranty information.

General Maintenance Information

PCV Valve Replacement

The PCV valve is a critical emission component. For the 2000 model year Ranger light truck equipped with 2.5L 4 cylinder engine, the dealer will replace the PCV valve free of charge at **60,000 miles** except in Canada, on California certified vehicles registered in California, and on California certified vehicles registered in states that have adopted California standards. The valve should be replaced again at **120,000 miles**, but this will be at the owner's expense.

For all passenger cars and light trucks under 6,000 Gross Vehicle Weight (GVW), regardless of engine the PCV valve should be replaced at **100,000 miles**. This replacement will be at the owner's expense.

For all light trucks over 6,000 GVW, regardless of engine, the PCV valve should be replaced at **120,000 miles**. This replacement will be at the owner's expense.

If you are unsure about your engine type or GVW ask your dealer.

Which Maintenance Schedule Should You Follow?

Normal Schedule

The Normal Schedule applies to those who operate their vehicle under typical, everyday driving conditions. The maintenance frequency represented in this schedule typifies what the vast majority of vehicle operators will require. The listed services should be performed at specified mileage intervals.

Special Operating Conditions

If you operate your Ford/Lincoln/Mercury **primarily** in one of the more demanding **"Special Operating Conditions"** listed below, you will need to have some items maintained more frequently, see page 35. If you only **occasionally** operate your vehicle under these conditions, it is not necessary to perform the additional maintenance. For specific recommendations, see your dealership service advisor or qualified service professional.

These special operating conditions are:

- Towing or carrying heavy loads
- Extensive idling and/or driving at low-speeds for long distances
- Driving in dusty conditions
- Off-road operation

Exceptions

In addition, there are several exceptions to the Normal Schedule for specific vehicles or special applications on page 33.

These exceptions are:

- Natural Gas Vehicles replace the gas tank(s)
- Class A Motorhome change the brake fluid
- Normal vehicle axle maintenance and lubrication
- Police and Taxi vehicle axles maintenance and lubrication

If you have any questions about your driving conditions, or for further clarification, please see your dealer.

Owner Checks and Services

Refer to Mileage Intervals for Additional Checks and Services


Certain basic maintenance checks and inspections should be performed by the owner or a service technician at the intervals indicated. Service information and supporting specifications are provided in the Owner's Guide. Any adverse condition should be brought to the attention of your dealer or qualified service technician as soon as possible for the proper service advice. The owner maintenance service checks are generally not covered by warranties so you may be charged for labor, parts or lubricants used.

Check Every Month for All Vehicles:

- Check function of all interior and exterior lights
- Check tires for wear and proper air pressure
- \bigcirc Check engine oil fluid level
- Check windshield washer solvent fluid level
- Check and drain fuel/water separator (diesel vehicles)

Check Every Six Months for All Vehicles:

- Check lap/shoulder belts and seat latches for wear and function
- Check air pressure in spare tire
- Check power steering fluid level
- Check washer spray, wiper operation, and clean all wiper blades
- Check parking brake for proper operation
- Check and lubricate all hinges, latches and outside locks
- Check and lubricate door rubber weatherstrips
- Check and clean body and door drain holes
- Check safety warning lamps (brake, ABS, air bag, safety belt) for operation
- Check cooling system fluid level and coolant strength
- Check battery water level (non-maintenance free)
- Check battery connections and clean if necessary
- Check clutch fluid level, if equipped

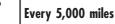


> Adjust clutch by lifting pedal (manual transmission Mustang only)

Normal Schedule

The following section contains the "Normal Schedule." This schedule is presented at specific mileage intervals with exceptions noted. In addition, those items listed in italic type are additional services that **only** the noted vehicles require.

Additional Information Available on the Web

To learn more about the importance of routine and dealer-performed maintenance on your vehicle, please visit the Ford Customer Service website. You'll also find important warranty information, customer assistance, technical expertise, frequently asked questions and much more. The website location is at: www.ford.com/customerservice/

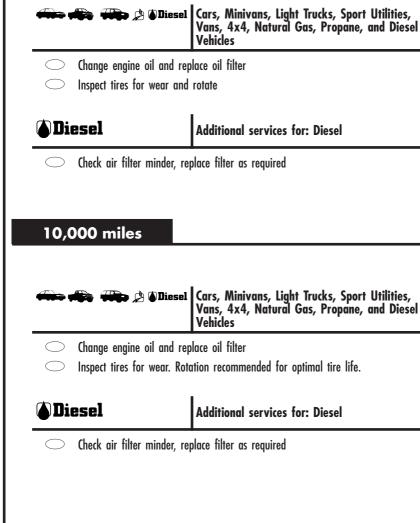

15,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect automatic transmission fluid level, if equipped with dipstick
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- Replace cabin air filter, if equipped




Additional services for: Light Trucks, Sport Utilities, and Vans

- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

🌢 Diesel

Additional services for: Diesel

- Check air filter minder, replace filter as required
- Replace fuel filter
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

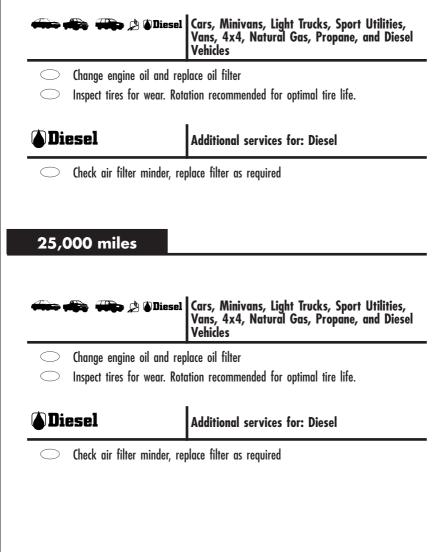

30,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect exhaust system and heat shields
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- C Replace engine air filter
- Replace fuel filter*
- Replace cabin air filter, if equipped
- Inspect accessory drive belt(s) (Villager)
- Change automatic transmission/transaxle fluid on all vehicles equipped with AX4S, AX4N, 4R7OW, 4R100, 4F27E. Inspect automatic transmission fluid level on all other vehicles, if equipped with dipstick. Consult your dealer for your particular requirements.
- C Replace climate-controlled seat filters (Navigator, if equipped)



Additional services for: Light Trucks, Sport Utilities, and Vans

- \bigcirc
- Inspect and lubricate 4X2 ball joints (except F-450/F-550) Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded. **Normal Schedule**

Additional services for: Diesel

- Check air filter minder, replace filter as required
- **Replace** fuel filter
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system



Additional services for: Natural Gas Vehicles



Inspect NGV tanks

35,000 miles



Change engine oil and replace oil filter

Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel

Additional services for: Diesel



Check air filter minder, replace filter as required

40,000 miles

Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel	Additional services for: Diesel	

 \supset Check air filter minder, replace filter as required

45,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect automatic transmission fluid level, if equipped with dipstick
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- Replace cabin air filter, if equipped
- Change green engine coolant, if equipped



Additional services for: Light Trucks, Sport Utilities, and Vans

- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

Diesel

Additional services for: Diesel

- \bigcirc Check air filter minder, replace filter as required
- Replace fuel filter
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

50,000 miles

- Change engine oil and replace oil filter
 - Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel

Additional services for: Diesel

- \bigcirc
- Check air filter minder, replace filter as required

55,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- \supset Change engine oil and replace oil filter
- \supset Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel	Additional services for: Diesel	

> Check air filter minder, replace filter as required

60,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect exhaust system and heat shields
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- C Replace engine air filter

Normal Schedule

- \bigcirc Replace fuel filter *
- Replace cabin air filter, if equipped
- Inspect drive belt (Villager)
- Replace PCV valve (All 4 cylinder Ranger light trucks. See page 5.)
- Change automatic transmission/transaxle fluid on all vehicles equipped with AX4S, AX4N, 4R70W, 4R100, 4F27E. Inspect automatic transmission fluid level on all other vehicles, if equipped with dipstick. Consult your dealer for your particular requirements.
- Replace climate-controlled seat filters (Navigator, if equipped)



Additional services for: Light Trucks, Sport Utilities, and Vans


- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Lubricate 4X2 wheel bearings, replace grease seals, and adjust bearings
- Change manual transmission fluid
 - Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

Diesel

Additional services for: Diesel

- \supset Check air filter minder, replace filter as required
- Replace fuel filter
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

*If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded.

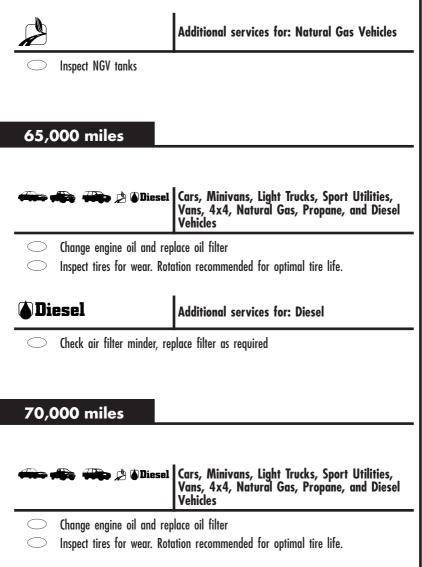


Diesel



Check air filter minder, replace filter as required

75,000 miles

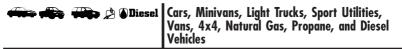

- Change engine oil and replace oil filter
- \bigcirc Inspect automatic transmission fluid level, if equipped with dipstick
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- Replace cabin air filter, if equipped
- Change green engine coolant, if equipped

Additional services for: Light Trucks, Sport Utilities, and Vans

- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)


Additional services for: Diesel

- Check air filter minder, replace filter as required
- Replace fuel filter

Diesel

Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

80,000 miles

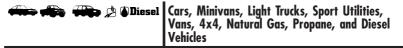


- \supset Change engine oil and replace oil filter
 - \supset Inspect tires for wear. Rotation recommended for optimal tire life.

🜢 Diesel

Additional services for: Diesel

Check air filter minder, replace filter as required

85,000 miles

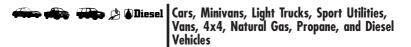

Change engine oil and replace oil filter

Inspect tires for wear. Rotation recommended for optimal tire life.


🌢 Diesel

Additional services for: Diesel

 \bigcirc


Check air filter minder, replace filter as required

90,000 miles

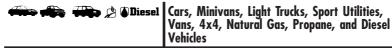

- Change engine oil and replace oil filter
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect exhaust system and heat shields
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- C Replace engine air filter
- Replace fuel filter*
- Replace cabin air filter, if equipped
- Inspect drive belt (Villager)
- Change automatic transmission/transaxle fluid on all vehicles equipped with AX4S, AX4N, 4R7OW, 4R100, 4F27E. Inspect automatic transmission fluid level on all other vehicles, if equipped with dipstick. Consult your dealer for your particular requirements.
- Replace climate-controlled seat filters (Navigator, if equipped)

*If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded.

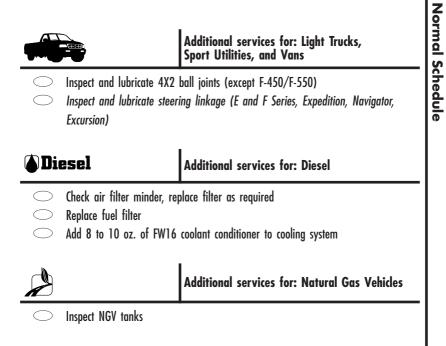

95,000 miles

>	Change	engine	oil	and	replace	oil	filter	

> Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel

Additional services for: Diesel



Check air filter minder, replace filter as required

100,000 miles



- Change engine oil and replace oil filter
- Inspect accessory drive belt(s)
- Inspect tires for wear. Rotation recommended for optimal tire life.
- C Replace spark plugs
- Replace the PCV on all passenger cars and light trucks under 6,000 Gross Vehicle Weight. (See page 5.)

🌢 Diesel

Additional services for: Diesel

> Check air filter minder, replace filter as required

105,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- \supset Change engine oil and replace oil filter
- \supset Inspect automatic transmission fluid level, if equipped with dipstick
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- Replace cabin air filter, if equipped
- Change green engine coolant, if equipped
- C Replace camshaft belt (Villager)



Additional services for: Light Trucks, Sport Utilities, and Vans


- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

🜢 Diesel

Additional services for: Diesel

- \bigcirc Check air filter minder, replace filter as required
- Replace fuel filter
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

110,000 miles

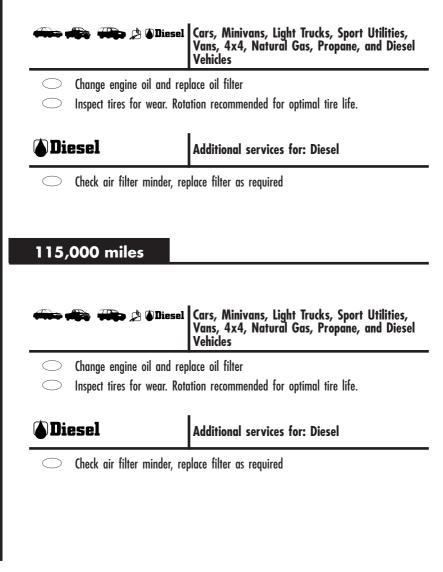

120,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- Change engine oil and replace oil filter
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses
- Inspect exhaust system and heat shields
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- C Replace engine air filter
- Replace fuel filter*
- Replace cabin air filter, if equipped
- Inspect drive belt (Villager)
- Replace PCV valve on all light trucks over 6,000 Gross Vehicle Weight and Rangers with 4 cylinder engines. (See page 5.)
- Change automatic transmission/transaxle fluid on all vehicles equipped with AX4S, AX4N, 4R70W, 4R100, 4F27E. Inspect automatic transmission fluid level on all other vehicles, if equipped with dipstick. Consult your dealer for your particular requirements.
- Inspect camshaft belt on all 2.0L, 4 cylinder engines (Escort, Tracer, Contour, Mystique, Cougar, and ZX2)
- Replace climate-controlled seat filters (Navigator, if equipped)

*If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded.



Additional services for: Light Trucks, Sport Utilities, and Vans

- Change manual transmission fluid \bigcirc
- \bigcirc Lubricate 4X2 wheel bearings (except F-450/F-550)
- \bigcirc Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- \bigcirc Inspect camshaft belt on 4 cylinder engine (2.5L Ranger)
- \bigcirc Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

Diesel

Additional services for: Diesel

- Check air filter minder, replace filter as required ()
- **Replace** fuel filter \bigcirc
- Add 8 to 10 oz. of FW16 coolant conditioner to cooling system

Additional services for: Natural Gas Vehicles

- Drain coalescent fuel filter bowl and replace filter
- Inspect NGV tanks

125,000 miles




🖨 🖾 🖉 Diesel 🛛 Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

Change engine oil and replace oil filter

Inspect tires for wear. Rotation recommended for optimal tire life.

Diesel	Additional services for: Diesel
Check air filter minder, re	place filter as required
130,000 miles	
🖚 🚓 🦚 🌶 Oliesel	Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles
Change engine oil and re	•
Inspect tires for wear. Rot	ation recommended for optimal tire life.
Diesel	Additional services for: Diesel
Check air filter minder, re	place filter as required
135,000 miles	
🖚 🦚 🛺 🌶 Diesel	Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles
Change engine oil and re	nlace eil filter
• •	ssion fluid level, if equipped with dipstick

system

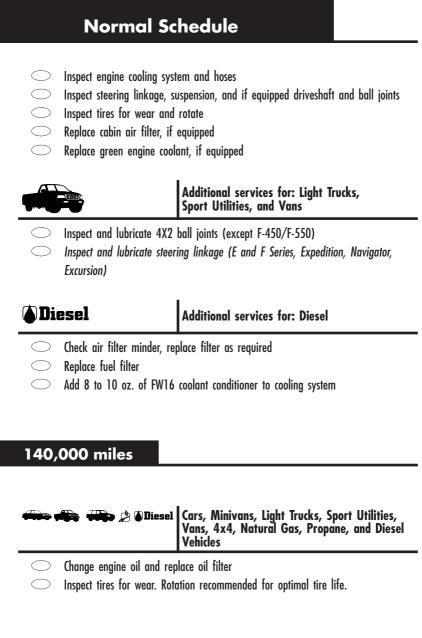

Diesel

Additional services for: Diesel



Check air filter minder, replace filter as required

145,000 miles

Cars, Minivans, Light Trucks, Sport Utilities, Vans, 4x4, Natural Gas, Propane, and Diesel Vehicles

- \supset Change engine oil and replace oil filter
- \supset Inspect tires for wear. Rotation recommended for optimal tire life.

🛦 Diesel	Additional services for: Diesel
----------	---------------------------------

Check air filter minder, replace filter as required

150,000 miles



- Change engine oil and replace oil filter
- Inspect brake pads/shoes/rotors/drums, brake lines & hoses, and parking brake system
- Inspect engine cooling system and hoses

- Inspect exhaust system and heat shields
- Inspect steering linkage, suspension, and if equipped driveshaft and ball joints
- Inspect tires for wear and rotate
- Replace engine air filter
- Replace fuel filter*
- C Replace cabin air filter, if equipped
- Replace orange engine coolant, if equipped
- Change automatic transmission/transaxle fluid and filter
- Replace rear axle lubricant on all rear wheel drive (RWD) vehicles.
- Inspect drive belt (Villager)
 - Replace climate-controlled seat filters (Navigator, if equipped)

Additional services for: Light Trucks, Sport Utilities, and Vans

- Inspect and lubricate 4X2 ball joints (except F-450/F-550)
- Replace 4x2 wheel bearings, grease seals, lubricate and adjust bearings
- Inspect and lubricate steering linkage (E and F Series, Expedition, Navigator, Excursion)

$\boldsymbol{\Box}$	
•	

Additional services for: 4x4 Vehicles


- Change front axle lubricant
 - \supset Change transfer case fluid

Diesel

Additional services for: Diesel

- Check air filter minder, replace filter as required
- Replace fuel filter
- . Add 8 to 10 oz. of FW16 coolant conditioner to cooling system. If vehicle is registered in California, the California Air Resources Board has determined that the tailure to perform this

It vehicle is registered in California, the California Air Resources Board has determined **That** the tailure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded.

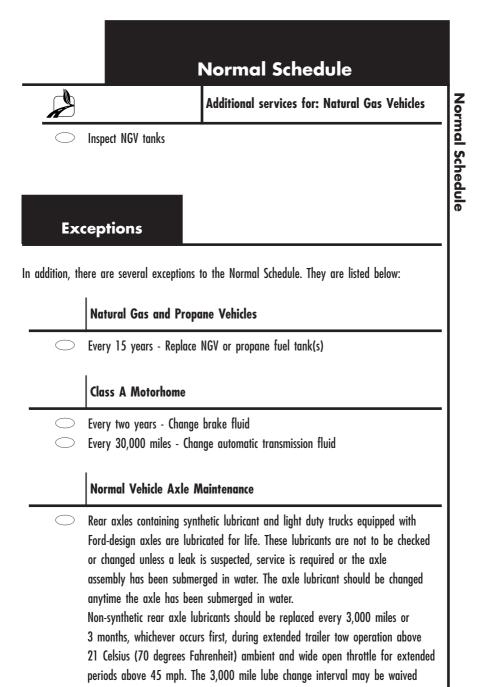

if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add four ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles. The rear axle lubricant should be changed anytime the axle has been submerged in water.

Police and Taxi Vehicle Axle Maintenance

Replace rear axle lubricant every 160,000 km (100,000 miles). Rear axle lubricant change may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number FITZ-19580-B or equivalent. Add four ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles. The rear axle lubricant should be changed anytime the axle has been submerged in water.

F-450 and F-550 Axle Maintenance

Replace rear axle lubricant every 100,000 miles under normal driving conditions on all F-450 and F-550 commercial applictions. For F-450 and F-550 trucks operated at or near maximum Gross Vehicle Weight Ratings, the rear axle lubricant should be replaced every 50,000 miles. In addition, this 50,000 mile schedule should be observed when the vehicles are operated under the Special Operating Conditions, where noted, beginning on page 36.

Special Operating Conditions

Items Needing Special Attention

If you operate your Ford/Lincoln/Mercury **primarily** in one of the more demanding **"Special Operating Conditions"** listed below, you will need to have some items maintained more frequently. If you only **occasionally** operate your vehicle under these conditions, it is not necessary to perform the additional maintenance. For specific recommendations, see your dealership service advisor or qualified service professional.



Towing a trailer or using a camper or car-top carrier

Every 3,000 miles or 3 months	Change engine oil and replace oil filter
Every 30,000 miles	Change automatic transmission fluid
Every 60,000 miles	Change transfer case fluid
As required	Change manual transmission fluid
As required	Inspect and lubricate U-joints



Extensive idling and/or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, patrol car or livery

Every 3,000 miles or 3 months	Change engine oil and replace oil filter Lube front lower control arm ball joints with zerk fittings, if equipped
Every 5,000 miles	Inspect brake system
Every 15,000 miles	Replace fuel filter
Every 30,000 miles	Change automatic transmission fluid
	Lubricate 4x2 wheel bearings, replace grease seals, and adjust bearings
Every 60,000 miles	Replace spark plugs
	Change transfer case fluid
As required	Replace cabin air filter

Special Operating Conditions



Operating in dusty conditions such as unpaved or dusty roads

Every 3,000 miles or 3 months	Change engine oil and replace oil filter
Every 15,000 miles	Replace fuel filter
Every 30,000 miles	Change automatic transmission fluid
Every 50,000 miles	Change rear axle lubricant (F-450 and F-550 only)
Every 60,000 miles	Change transfer case fluid
As required	Replace engine air filter
As required	Replace cabin air filter



Off-road operation

Every 30,000 miles	Change automatic transmission fluid
Every 50,000 miles	Change rear axle lubricant (F-450 and F-550 only)
Every 60,000 miles	Change transfer case fluid
As required	Replace cabin air-filter
As required	Inspect and lubricate U-joints

See An Authorized Dealer

This section of the guide is designed to allow your Ford or Lincoln Mercury dealer, or Ford or Lincoln Mercury Auto Care service center or other qualified service technician to record that the recommended service was completed at the appropriate mileage intervals. Be sure to ask your service provider to record the type of service rendered (Normal or Special Operating Conditions — SOC) each time service is performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Maintenance and Service Record	
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:	
Mileage:		- 1
Normal 🔄		
soc		
See corresponding	g mileage in maintenance schedule for services performed.	
Date:	Dealer's Stamp:	
Mileage:		
Normal		

See corresponding mileage in maintenance schedule for services performed.

SOC

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Date:	Dealer's Stamp:
Mileage:	
Normal	
soc	
See corres	sponding mileage in maintenance schedule for services performed.
Date:	Dealer's Stamp:
Mileage:	
Normal 🔄	
SOC	
See corres	sponding mileage in maintenance schedule for services performed.
Date:	Dealer's Stamp:
Mileage:	
Normal	
soc	
See corres	sponding mileage in maintenance schedule for services performed.
Date:	Dealer's Stamp:
Mileage:	
Normal 🔄	
soc	

Date:	Dealer's Stamp:	
Mileage:		
Normal		
soc		
See corresponding	g mileage in maintenance schedule for services performed.	
Date:	Dealer's Stamp:	
Mileage:		
Normal		

See corresponding mileage in maintenance schedule for services performed.

SOC

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Maintenance and Service Record	
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:	
Mileage:		- 1
Normal 🔄		
soc		
See corresponding	g mileage in maintenance schedule for services performed.	
Date:	Dealer's Stamp:	
Mileage:		
Normal		

See corresponding mileage in maintenance schedule for services performed.

SOC

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Maimenai	nce and Service Record
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:	
Mileage:		
Normal		
soc		
See corresponding	g mileage in maintenance schedule for services performed.	
Date:	Dealer's Stamp:	
Mileage:		
Normal		

See corresponding mileage in maintenance schedule for services performed.

SOC

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Maimenai	nce and Service Record
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	nding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:	
Mileage:		
Normal		
SOC		
See correspondin	ng mileage in maintenance schedule for services performed.	
Date:	Dealer's Stamp:	
Mileage:		
Normal		

See corresponding mileage in maintenance schedule for services performed.

SOC

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

See corresponding mileage in maintenance schedule for services performed.

Date:	Dealer's Stamp:
Mileage:	
Normal SOC	

Maintenance and Service Record	
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.
Date: Mileage: Normal SOC	Dealer's Stamp:
See correspo	onding mileage in maintenance schedule for services performed.